



Door and Window Tape Installation Instructions

Sill Diagram:

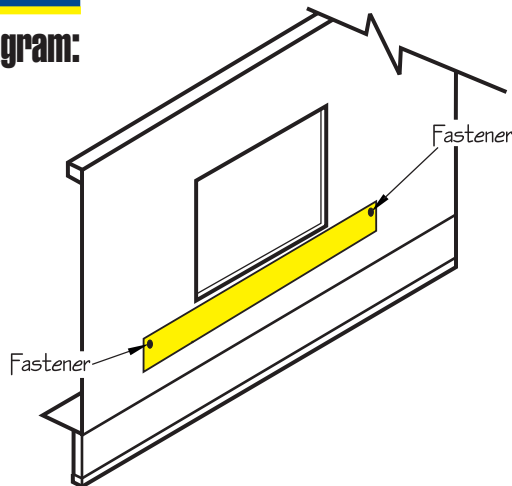


Install **LeakBarrier Door and Window Tape** at the sill. Cut section of tape the width of rough opening plus at least 12". Remove paper, center and install across the sill. Make two cuts so that the top half extends into the rough opening and the other half is bonded to the sheathing. Set the window frame into the rough opening and fasten to the substrate through the flanges per window manufacturer's recommendation. Tape should be visible below the sill flange. If window has already been installed, tape may be applied over the bottom flange.

Jamb Diagram:

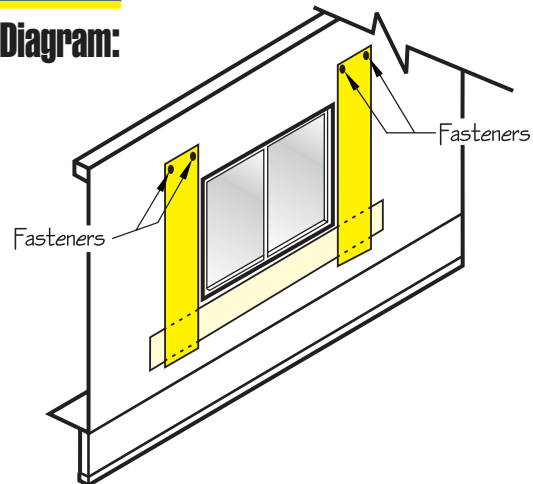


Install vertical sections of **LeakBarrier Door and Window Tape** over the jamb flanges and to the sheathing. Section should overlap the sill section at the bottom and extend 3" above rough opening at the top.

Header Diagram:

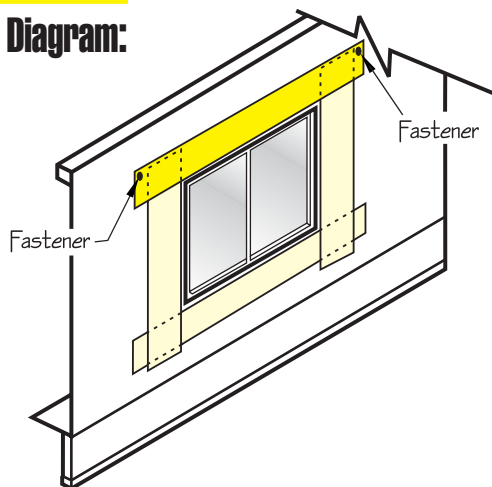

Install **LeakBarrier Door and Window Tape** to the head flange and sheathing. Head section should extend beyond jamb sections on either side. Jamb sections should not extend above head section.

Finishing:

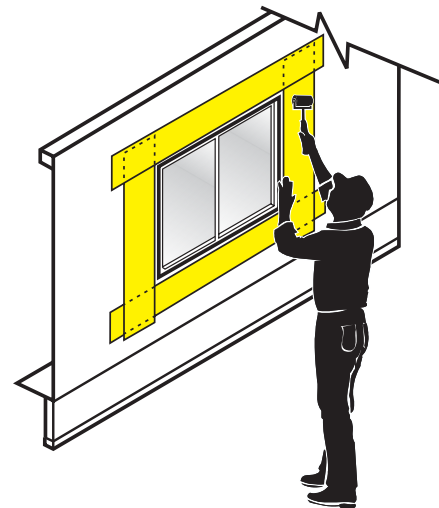

Roll **LeakBarrier Door and Window Tape** with a hand-held roller to assure smooth, uninterrupted contact. Small wrinkles will not affect the performance of the tape, but should be smoothed out. Large wrinkles should be repaired by cutting out and patching the area with LeakBarrier Door and Window Tape.

